


## STEP 26 Landing Gear

From parts bag 6: Assemble the landing gear by sliding the Aluminum Skids through the Struts, start the four M3x5 Set Screws into the struts, but do not tighten at this time. (Do not use any threadlock). Set the distance from the rear of the skid to the strut at 25 to 30mm. Attach the landing gear to the main mechanics using four M3x16 Socket Cap Screws and locknuts. Now set the skids into their desired position and tighten the 4 set screws. Be careful not to strip the holes in the struts.

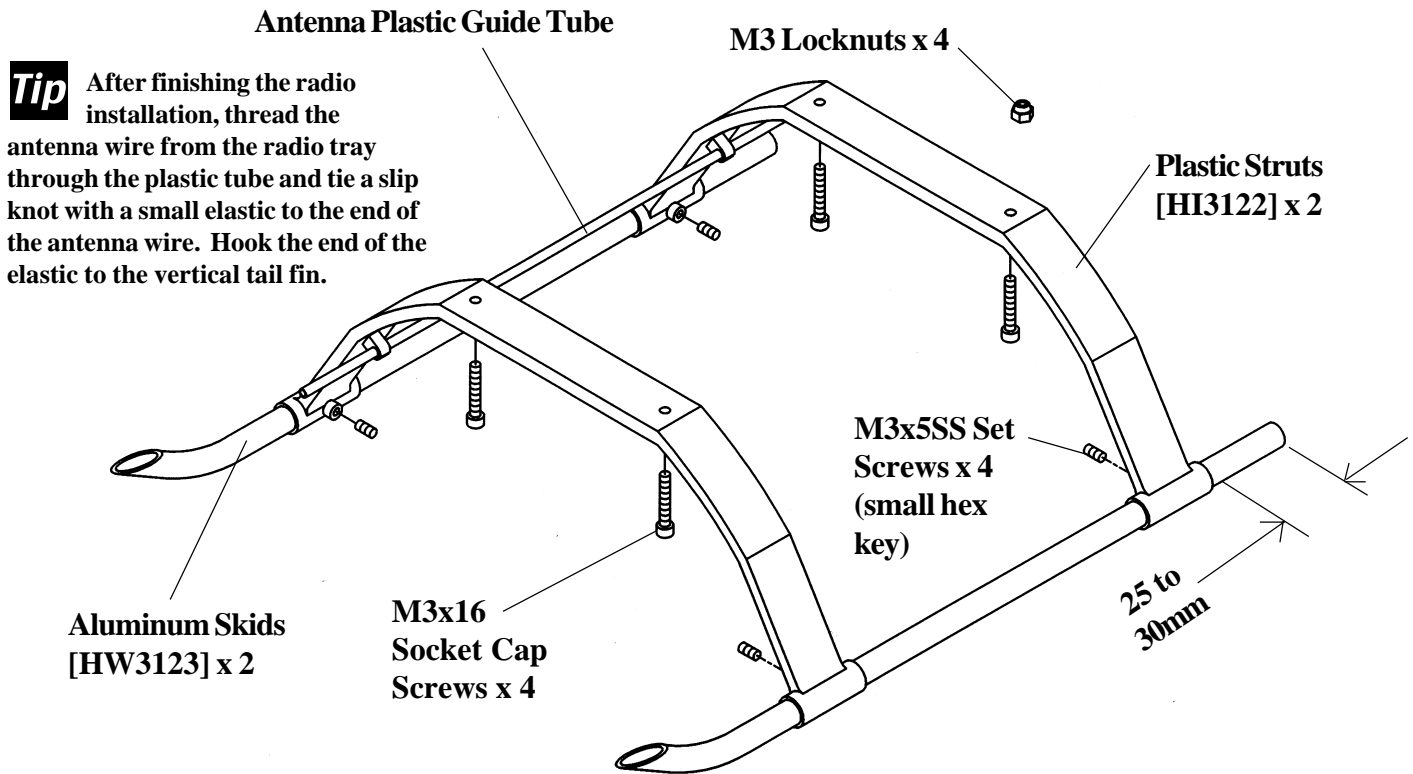

## STEP 27 Tail Output Shaft

From parts bag 7: Notice that the Tail Rotor Drive Shaft has 2 holes, one through the shaft and one drilled partially into the shaft. Slide the **SMALLER** Bevel Gear with the teeth facing inward from the end with the through hole. Position the gear by aligning the holes. Press the M2x12 Pin through and secure with one M3x4 Set Screw using threadlock. Slide the Spacer Tube onto the shaft and position against the gear.

